


BIAS CURRENT SET UP

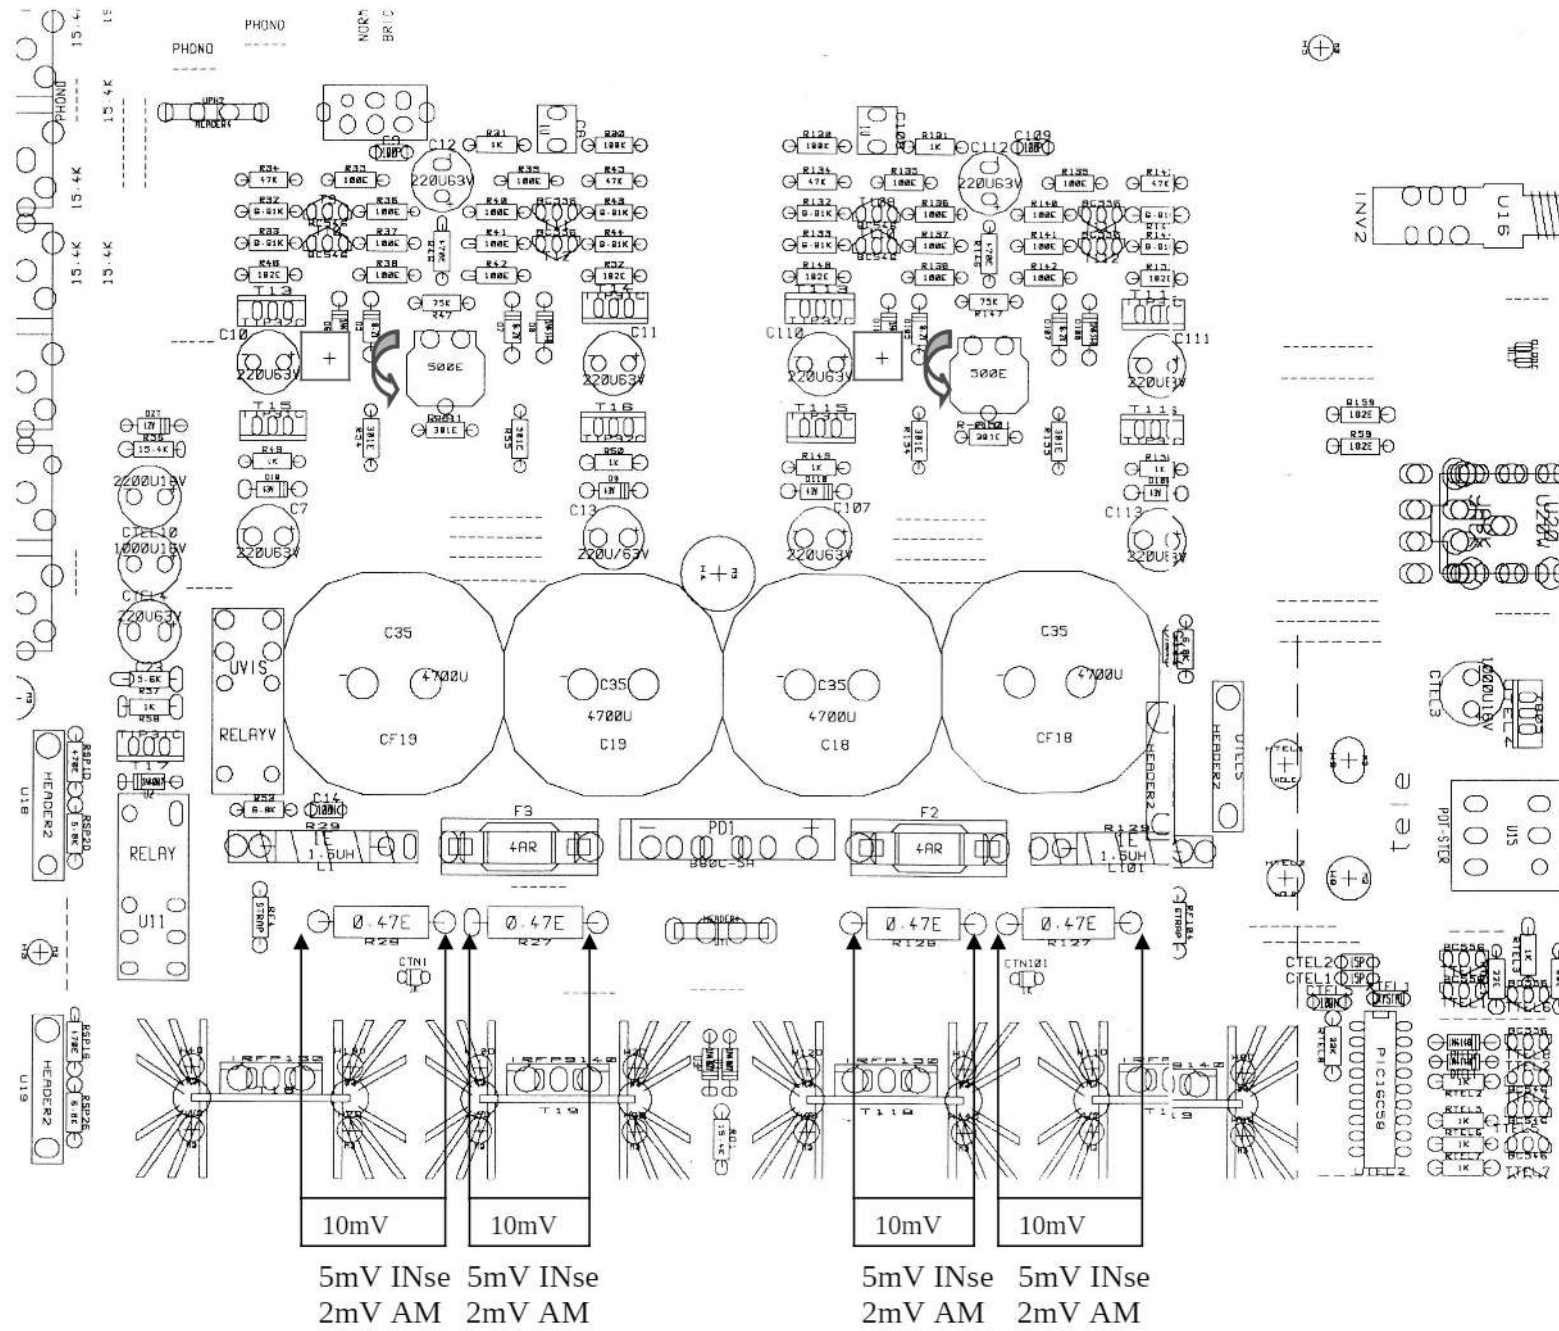

To set up the bias current on ATOLL IN50, IN80, IN100, and AM50, AM80, AM100 :

Turn each "adjustable" slowly anticlockwise till you have 10mV DC (5mV for INse, 2mV for AM50, AM80 and AM100) on each resistor R27, R28 (R127, R128 left channel). This operation must be done when the amplifier is plugged since at least one hour and must be repeated after half an hour.